


IP Holder Position Adjustment

Please note that you need to adjust the IP holder in case the images acquired are a little bit rotated.


- 1) Remove Front door assembly.
- 2) Remove SD card rear door.
- 3) Remove Top cover.
- 4) Remove Internal cover.
- 5) Measure the length on each edge between IP holder and Eraser assembly.

Please refer to the marked length in the following picture.


If there is some difference between two measurements, please proceed next step.

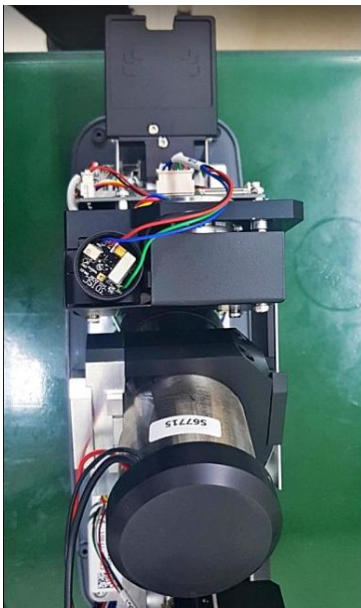

IP Holder Position Adjustment

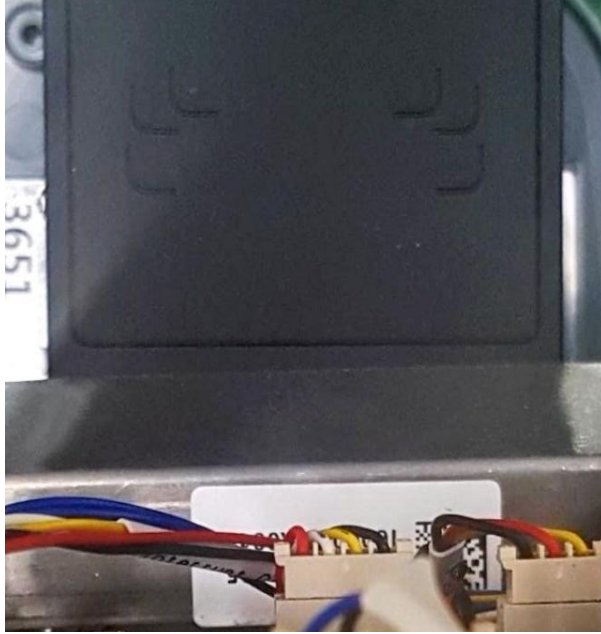


- 6) Remove two screws, and then carefully lift off the IP holder.

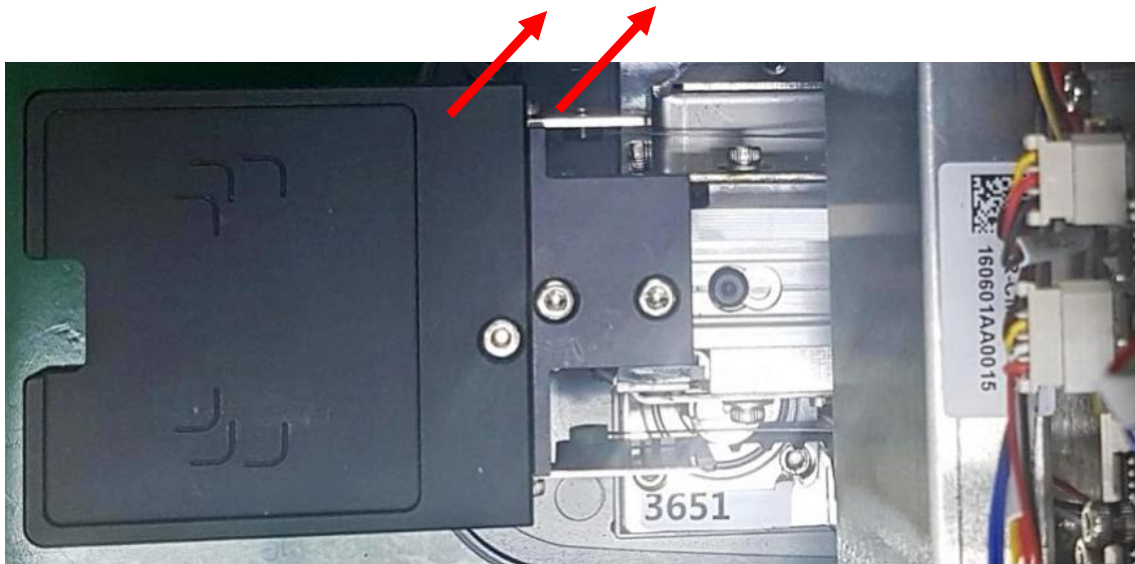

- 7) Check if the marked bracket is parallel. If not, please adjust the bracket.

If you adjust the bracket position, please confirm with the image. If not adjusted, please proceed next step.

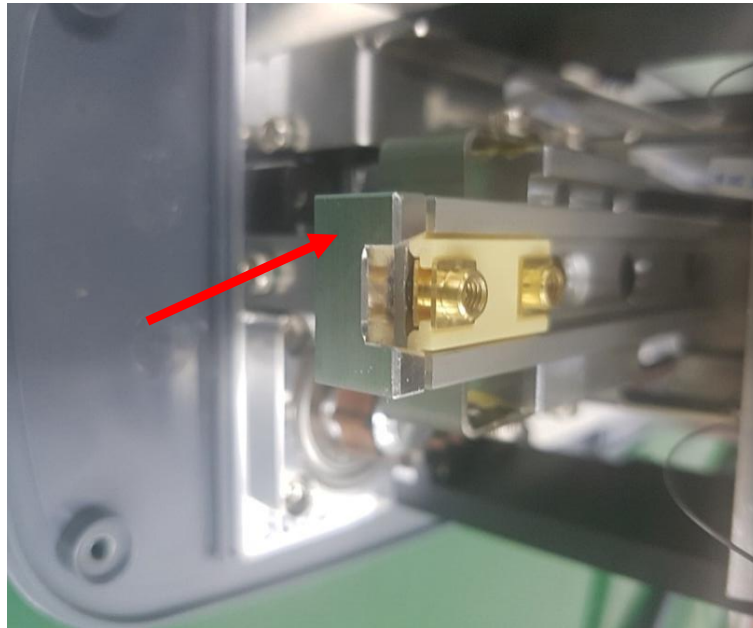

- 8) Put the IP holder position back, and then tighten two fixing screws.
- 9) Loosen marked two screws, and then reposition the IP holder parallel to Eraser assembly and then retighten two screws.
- 10) Confirm with the scanned image.

