





➤ **Check USB driver (PLX)**

Need to reinstall a USB driver if USB driver is corrupt.

- 1) Disconnect USB cable from scanner.
- 2) Run a USB driver named "FireCRDriver_overwrite.exe" in the Quantor folder.
- 3) Connect USB cable.

➤ **Check USB power saving mode**

Disable USB power saving mode in the device manager.

➤ **USB cable**

Reconnect a USB cable in another port from PC side or exchange a USB cable.

➤ **USB powered Hub**

Lack of power from USB port on PC side can cause the issue with losing USB connection. In this case, a powered USB Hub need to be installed.

➤ **Main board**

If USB chipset on the main board is defective, losing USB connection can happen.