



## ❖ The Firmware installation.

1. Go to the QuantorDent folder.  
The QuantorDent is installed in the C drive
2. Run the “DentalCR\_SystemUpdater” as administrator rights.

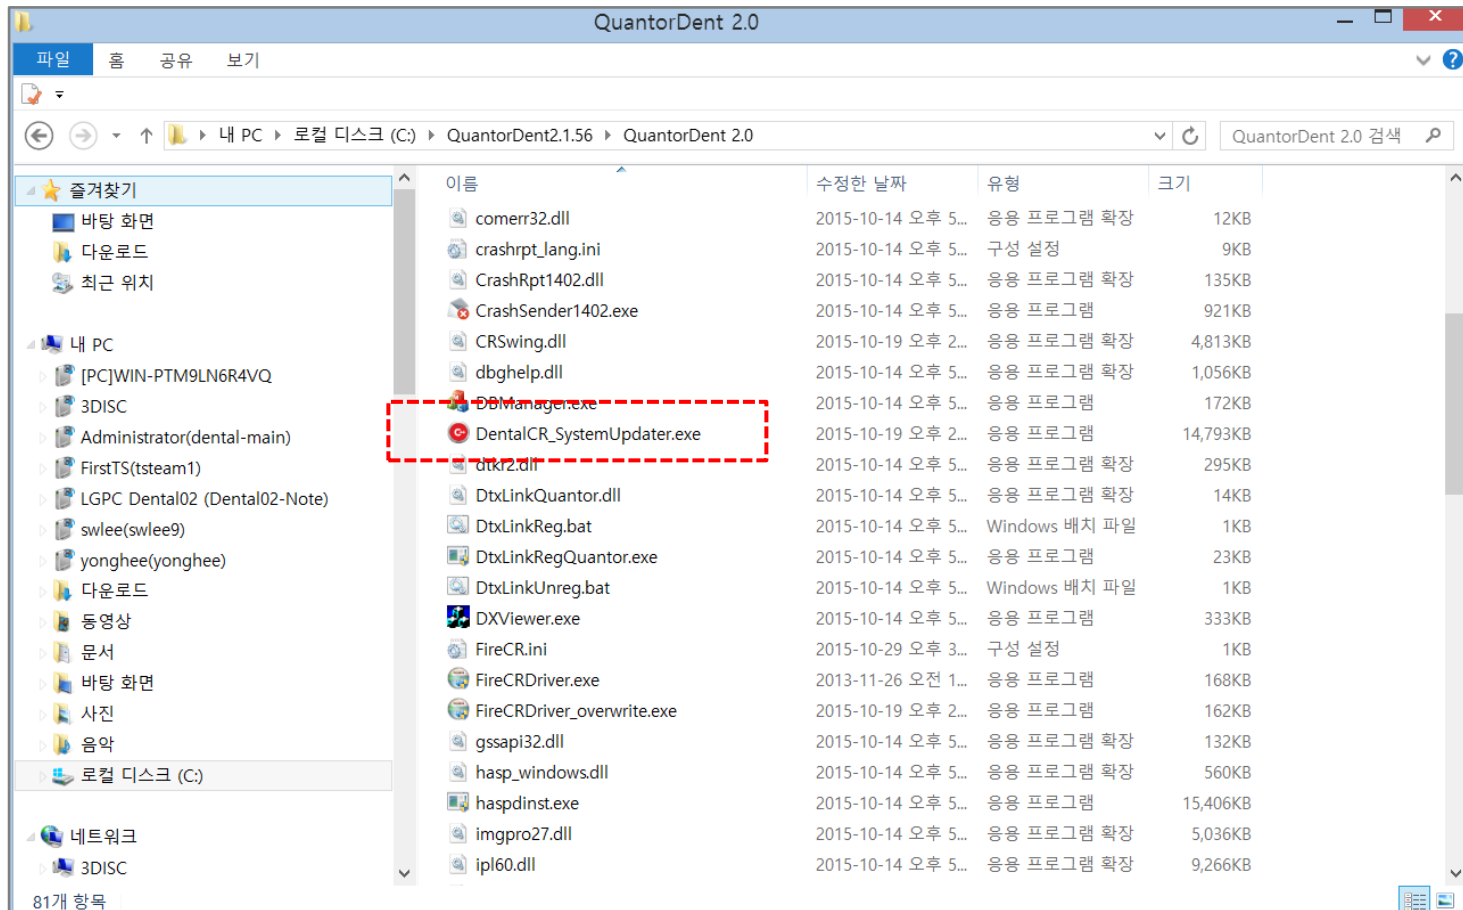

## ❖ The Firmware installation.


3. Click “Connect”

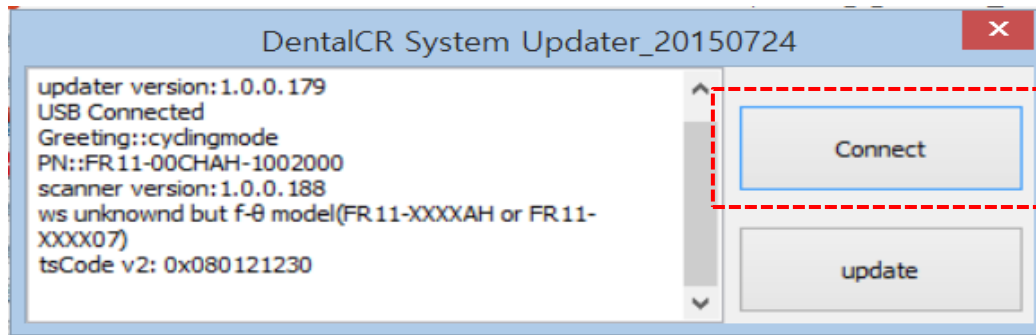

4. Click “Update” and “Yes”

5. Wait until it is finished.

6. Turn off and back on the dental unit.

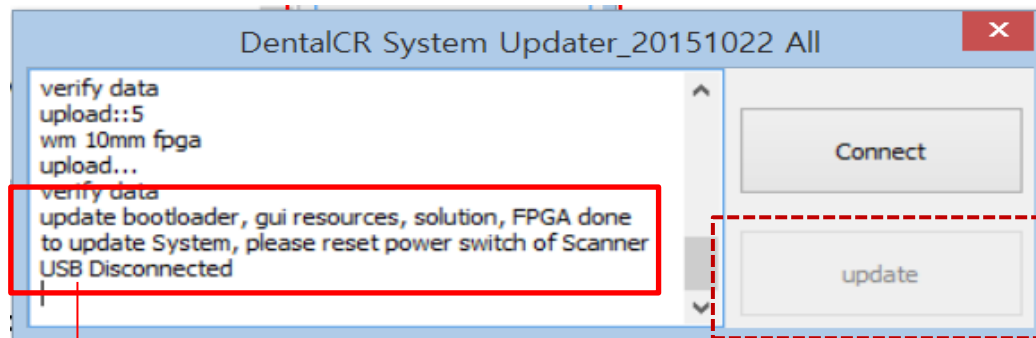

→ The message means that firmware update is finished.